


Assembly Manual - PHITS I23A

1 . Remove all the screws and take the speaker's top and frontal covers apart.



2 . Place plate B making sure the holes match the nuts base. It should be left free 6 mm at the rear.

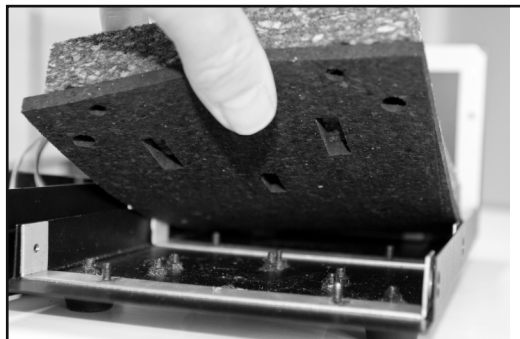

3 . Place plate BK in a way that is well fitted between plate B and the rear.

4 . Place plates L and R. This must be fitted between the conglomerate foam of plate B and the side of the case.



5 . Place the grey foam between plates L and R.



6 . Place plate T closing the case.



7 . Replace both, the metal and the front covers paying attention that plates L and T remain inside the front part.



**Some models may vary from this manual.*