


PHITS Y6A



For Yaesu speakers SP-6, SP-767 and SP-102,
Three different acoustic foams
Better audio performance

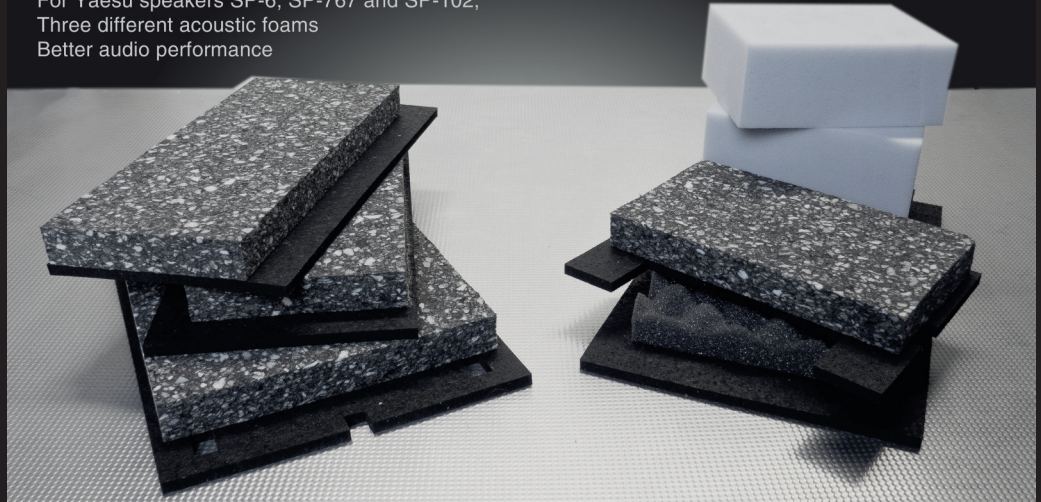


Phits is a set of acoustic foams designed to get a much clearer sound from your speaker.

The sound produced by the speaker reverberates backwards inside the cabinet and adds noise to your transceiver signal. Signals, as consequence, lose intelligibility. This noise usually occurs bellow 1000 Hz. Phits reduces reverberation to a minimum level by absorbing sound and by invreasing the speaker mass.



AUDIO ANALISYS

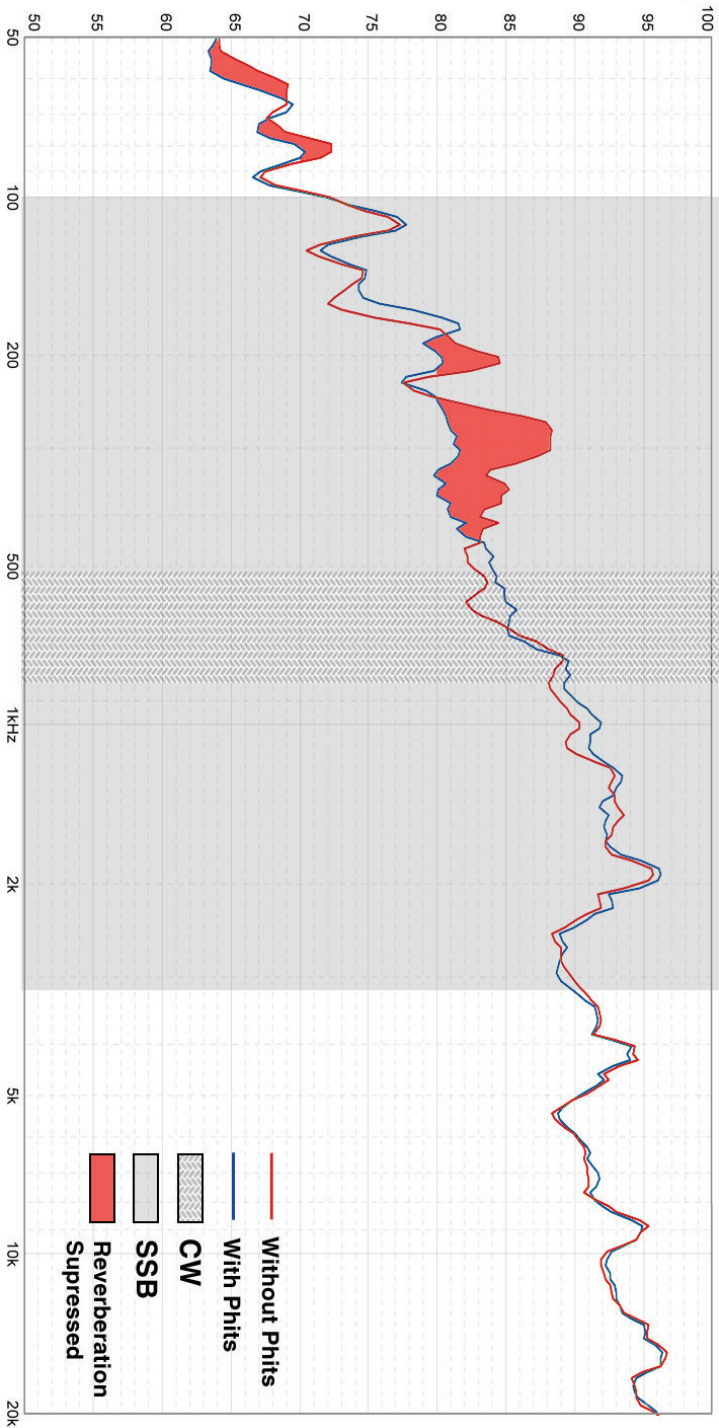


PHONEMA SPEAKERS


08340 Vilassar de Mar, Barcelona, Spain

www.phonemaspeakers.com
info@phonemaspeakers.com


Assembly Instructions

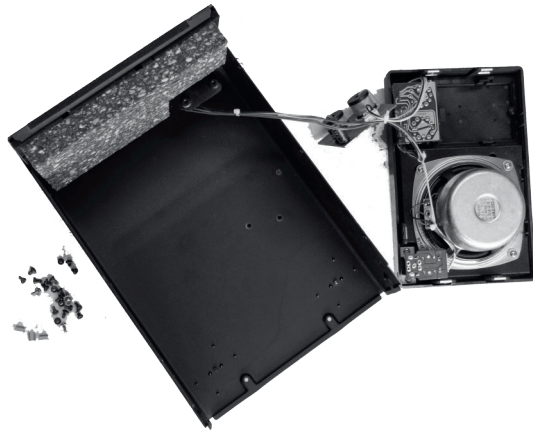


1. Remove the top cover, the front panel and the PCB filters together with the screwed spacer sleeves. Handle the cables with care.
2. Place plate BK. If you have either the Phone Patch or the DSP unit installed, you should first cut the plate BK remaining part as shown in the picture before placing it.

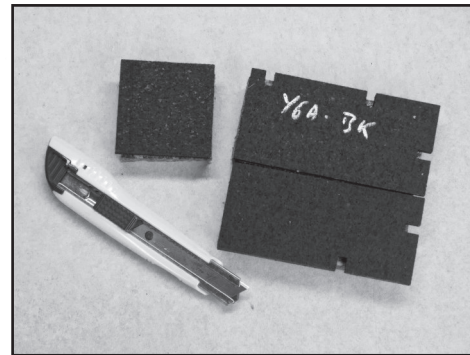

3. Use a sharp tool to make holes in plate B foam. These holes must correspond to your speaker model. Then, introduce the screwed spacer sleeves in the hole. Place plate B in its place and fix the PCB filters with its corresponding screws.

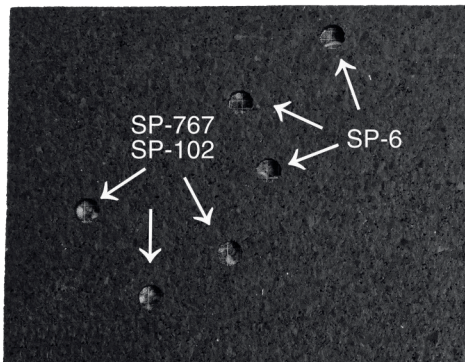

4. High density foam is separated from plate R, so it can be adapted to your needs. This is due to the fact that internal additional accessories such as PhonePatch and DSP Timewave unit can be installed within the speaker.
5. If this is the case, the rubber plate must be placed between the already installed accessory and the speaker enclosure. The high density foam, then, will be glued to the other side of the accessory.

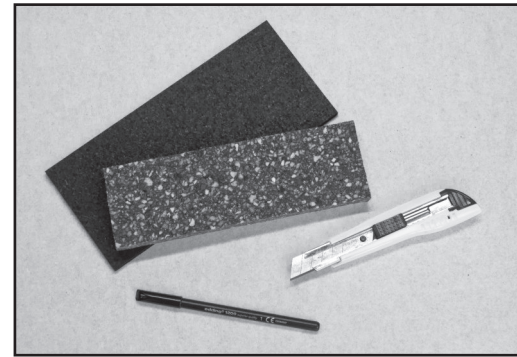

6. In case you have no additional accessories, please cut the foam in such a way that the PCB filter can fit comfortably as it is shown in the picture. Gluing the high density foam to plate R is optional because it depends upon future accessories installation.
7. Place plate L. It must fit between the agglomerated foam of plate B and plate BK.



8. Replace the front panel. Handle the cables with care.

9. Place the grey Basotect foam as shown in the picture.
10. Place plate T carefully fitting it between plates BK, L and R. In case of having any additional installed accessories, you should first remove plate B smaller precut part.
11. Place the speaker top cover and fix it with its corresponding screws.



**Brand your speaker
with the sticker and
enjoy your new sound!**



**Some models may vary from this manual.*